



TA-001 Adapter Quickstart Guide

The TA-001 adapter works with the HMP155 temperature probe and Apogee TS-100/TS-200 series aspirated radiation shields.

- 1** Insert the plug into the port on the TS shield until the plug bottoms out.

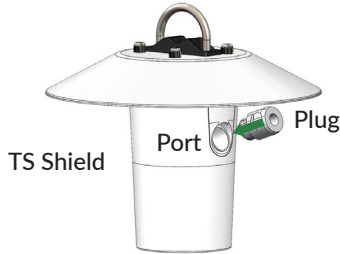

- 2** Slide the notch in the tube into the hat of the TS shield, making sure it is aligned with the plug. Slide the tube into the hat until it bottoms out.

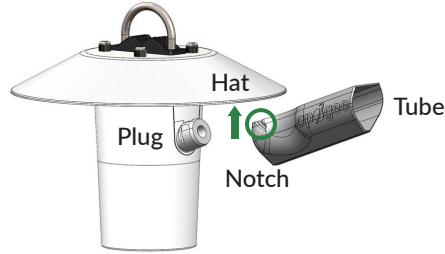

- 3** Insert the HMP155 probe label up into the tube and the plug until it bottoms out. The probe should be inside the plug with the tube around the probe.

