


NET RADIOMETER

SN-500-SS & SN-522-SS



Radiation Fluxes

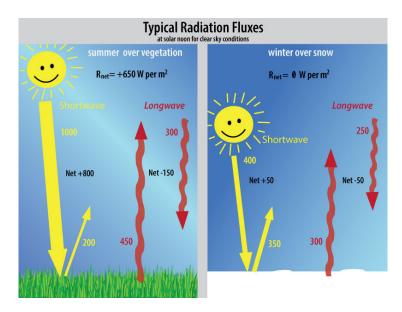

Net radiation is the sum of the four components shown to the left (incoming shortwave, outgoing shortwave, incoming longwave, outgoing longwave). Incoming shortwave incident on the surface is either reflected or absorbed by the surface material, and longwave radiation is emitted from the surface and emitted from the molecules of air in the atmosphere. Typical clear sky summer fluxes over grass and clear sky winter fluxes over snow are shown. A typical summer flux at solar noon would be $+650 \text{ W m}^{-2}$; in winter it would be 0 W m^{-2} .

Features

TYPICAL APPLICATIONS

Net radiation is a key variable in the surface energy balance and influences turbulent fluxes, including evapotranspiration. Applications include measurements on flux towers and weather stations.

DIGITAL OUTPUT

An on-board 24-bit analog to digital converter makes measurements and provides a digital SDI-12 (SN-500) or Modbus (SN-522) output. This eliminates the need for multiple analog datalogger channels to measure each of the four components of net radiation.

HIGH ACCURACY

Measure all four components of net radiation with a digital output that saves datalogger channels. Comparable accuracy to industry-leading competition in long-term field testing.

COMPACT & LIGHTWEIGHT


The small lightweight design enables easy mounting to a cross arm using the AM-500 mounting bracket, which facilitates precision leveling.


HEATED SENSORS

Each sensor includes a 0.2 W heater to minimize errors from dew, frost, rain, and snow that can block the radiation path.

Product Specifications

| | SN-500-SS | SN-522-SS | |
|--|---|--|--|
| Input Voltage Range | 5.5 to 24 V DC (heaters are optimized to run at 12 V DC) | | |
| Output Type | SDI-12 | Modbus | |
| Current Draw (12 V DC Supply Voltage) | Heaters on, communication enabled: 63 mA; Heaters off, communication enabled: 1.5 mA; Heaters off, communication disabled: 0.6 mA | Heaters on: 72 mA; Heaters off: 13.5 mA | |
| Response Time | 1 s (SDI-12 data transfer rate; detector response times are 0.5 sec) | It takes 750 ms to digitize all detector signals | |
| Heaters (sensors individually heated) | 62 mA current draw and 740 mW power requirement at 12 V DC | | |
| Operating Environment | -50 to 80 C; 0 to 100 % relative humidity | | |
| Dimensions | 116 mm length, 45 mm width, 66 mm height | | |
| Mass | 320 g (with mounting rod and 5 m of lead wire) | | |
| Cable | M8 connector (IP68 rating) to interface to sensor housing; 5 m of four conductor, shielded, twisted-pair wire in a TPR jacket with pigtail lead wires | | |
| Warranty | 4 years against defects in materials and workmanship | | |

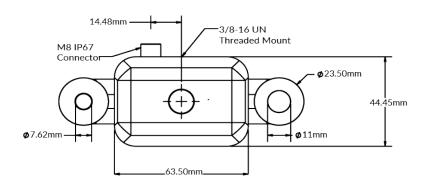

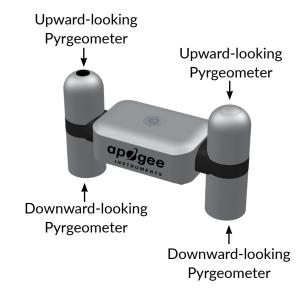



Product Specifications

| | SL-500 Series Pyrgeometers |
|---|--|
| Sensitivity | 0.12 mV per W m ⁻² (variable from sensor to sensor, typical value listed) |
| Calibration Factor (Reciprocal of Sensitivity) | 8.5 W m ⁻² per mV |
| Calibration Uncertainty | ± 5 % |
| Measurement Range | -200 to 200 W m ⁻² (net longwave irradiance) |
| Measurement Repeatability | Less than 1 % |
| Long-term Drift | Less than 2 % change in sensitivity per year |
| Non-linearity | Less than 1 % |
| Response Time | Less than 0.5 s |
| Field of View | 180° (upward); 150° (downward) |
| Spectral Range | 5 to 30 μm (50 % points) |
| Temperature Response | Less than 5 % from -15 to 45 C |
| Window Heating Offset | Less than 10 W m ⁻² |
| Zero Offset B | Less than 5 W m ⁻² |
| Tilt Error | Less than 0.5 % |
| Uncertainty in Daily Total | ± 5 % |
| Temperature Sensor | 30 k Ω thermistor, ± 1 C tolerance at 25 C |
| Output from Thermistor | 0 to 2500 mV (typical, other voltages can be used) |
| Input Voltage Requirement for Thermistor | 2500 mV excitation (typical, other voltages can be used) |

| | SP-500 Series Pyranometers |
|---|--|
| Sensitivity (variable from sensor to sensor) | $0.045~\text{mV}$ per W m $^{-2}$ (upward); $0.035~\text{mV}$ per W m $^{-2}$ (downward); (typical values listed) |
| Calibration Factor (Reciprocal of Sensitivity) | $22 \text{ W m}^{-2} \text{ per mV (upward)};$ $28.5 \text{ W m}^{-2} \text{ per mV (downward)}$ |
| Calibration Uncertainty | Less than 3 % at 1000 W m ⁻² |
| Output Range | 0 to 90 mV (upward); 0 to 70 mV (downward) |
| Measurement Range | 0 to 2000 W m ⁻² (net shortwave irradiance) |
| Measurement Repeatability | Less than 1 % |
| Long-term Drift | Less than 2 % per year |
| Non-Linearity | Less than 1 % |
| Detector Response Time | 0.5 s |
| Field of View | 180° (upward); 150° (downward) |
| Spectral Range | 385 nm to 2105 nm (upward); 370 to 2240 nm (downward) |
| Directional (Cosine) Response | Less than 30 W m ⁻² at 80° solar zenith (upward); Less than 20 % for angles between 0 to 60° (downward) |
| Temperature Response | Less than 5 % from -15 to 45 C |
| Zero Offset A | Less than 5 W m ⁻² ; less than 10 W m ⁻² (heated) |
| Zero Offset B | Less than 5 W m ⁻² |
| Uncertainty in Daily Total | Less than 5 % |

Rev: 27-Sept-2022