

# **OXYGEN SENSORS**

SO-100, SO-200, & SO-400 Series








# **Product Specifications**

	SO-110-SS	SO-210-SS	SO-411-SS	SO-421-SS	
Input Voltage Requirement	5.5 to 24 V DC			24 V DC	
Current Draw	_	-	0.6 mA (quiescent); 1.3 mA (active)		
Input Voltage (heater and thermistor)	12 V DC continuous (for heater); 2.5 V DC excitation (for thermistor)				
Heater Current Draw	6.2 mA (74 mW power requirement when powered with 12 V DC source)				
Thermistor Current Draw	0.1 mA DC at 70 C (maximum, assuming input excitation of 2.5 V DC)				
Reference Temperature Sensor	Thermistor				
Measurement Range	0 to 100 % O <sub>2</sub>				
Output (Sensitivity)	2.6 mV per % O₂	0.6 mV per % O₂	Digital SD	Digital SDI-12 output	
Output at 0 % $O_2$	5 % of output at 20.95 % O₂	2 % of output at 20.95 % $O_{\rm 2}$	-	_	
Measurement Repeatability	Less than 0.1 % of mV output at 20.95 % $O_2$				
Non-linearity	Less than 1 %				
Long-term Drift (Non-stability)	1 mV per year	0.8 mV per year	1 mV per year	0.8 mV per year	
Oxygen Consumption Rate	0.1 μmol O₂ per day at 20.95 % O₂ and 23 C (galvanic cell sensors consume O₂ in a chemical reaction with the electrolyte, which produces an electrical current)				
Response Time	60 s	14 s	60 s	14 s	
Operating Environment	-20 to 60 C; 0 to 100 % relative humidity (non-condensing); 60 to 140 kPa				
Dimensions	32 mm diameter, 68 mm length				
Diffusion Head (Accessory)	35 mm diameter, 35 mm length, 125 mesh screen				
Flow Through Head (Accessory)	32 mm diameter, 91 mm length, 0.25 in barbed nylon connectors				
Mass	175 g (with 5 m of lead wire)				
Cable	5 m of six conductor, shielded, twisted-pair wire				
Influence from Various Gases	Sensors are unaffected by CO, CO <sub>2</sub> , NO, NO <sub>2</sub> , H <sub>2</sub> S, H <sub>2</sub> , and CH <sub>4</sub> . There is a small effect (approximately 1 %) from NH <sub>3</sub> , HCI, and C <sub>6</sub> H <sub>6</sub> (benzene). Sensors are sensitive to SO <sub>2</sub> (signal responds to SO <sub>2</sub> in a similar fashion to O <sub>2</sub> ). Sensors can be damaged by O <sub>3</sub>				
Warranty	4 years against defects in materials and workmanship				

## Dimensions

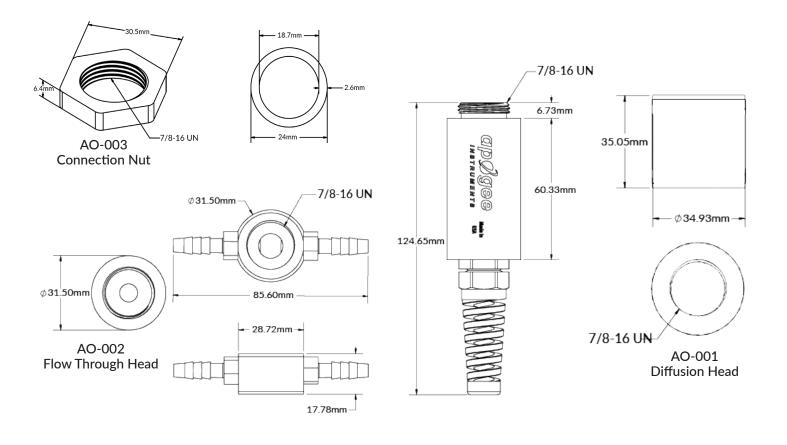

## Features

### **TYPICAL APPLICATIONS**

- Measurement of  $O_2$  in laboratory experiments or of  $O_2$  gradients in soil/underground
- Monitoring gaseous O₂ in indoor environments for climate control, in compost piles, and in mine tailings
- Monitoring redox potential in soils
- Determination of respiration rates through measurement of O<sub>2</sub> consumption in sealed chambers

## **OUTPUT OPTIONS**

- Analog V DC
- SDI-12
- or hand-held meter

#### **HEATED DETECTOR**

The gas permeable membrane inlet can be heated to prevent water vapor from condensing and blocking the diffusion path. When sensors are used in soil or compost.

## **UNIQUE DESIGN**

Sensors have an internal thermistor fully sealed for temperature monitoring. Sensors are housed in a polypropylene body for long-term use underground. Two head options include a diffusion head for field use and a flow-through head for laboratory use.

### SIMPLE CALIBRATION

Voltage output is linearly proportional to absolute amount of oxygen. Calibration is accomplished by measuring the voltage under ambient conditions (atmosphere is 20.95 %  $O_2$ ) and deriving a linear calibration factor. A zero offset can be obtained with N<sub>2</sub> gas (recommended for measurements below 10 %  $O_2$ ).



